



TWS ANC Bluetooth Earphones

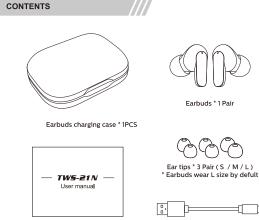


User manual

PRODUCT INTRODUCTION Charging pins Specification In-ear detection Pairing name TWS-21N Bluetooth version Battery 50mAh (each earbud) 400mAh (charging base Play time 7H (ANC off) Touch panel -6H (ANC on) Led indicator -Call time Earbuds charging time 1.5H Case charging time 2H Standby time 90days Charging port Type c Earbuds reset button Charging indicator Charging port

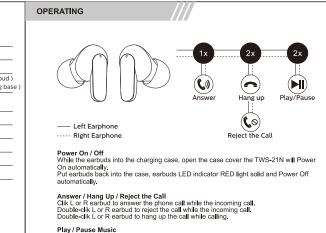

Double-click L or R earbud to Play/Pause while playing music.

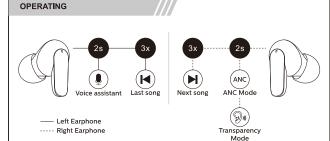

Pre / Next Song

Triple-click L earbud to return to previous song while playing music.


Triple-click R earbud to next song while playing music.

Press and hold 2 seconds the L earbud to wake up the voice assistant.

ANC On → Transparence → ANC Off Mode

Press and hold 2 seconds the R earbud to change the ANC or Transparence or ANC Off normal mode.

GET STARTED

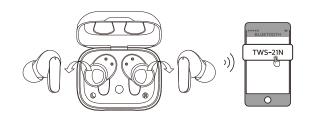

Take "TWS-21N" out from the charging case, both earbuds will power on and pairing each other automatically, at the same time, the master earbud will blink the Red and Yellow-green

Open the device wireless and chose the name of "TWS-21N" on list, then you will hear CONNECTED from earbud.

RESET

 


Type-C charging cable * 1PCS

Clear pairing records

Put back both earbuds into the charging case, open the cover and hold the multi-function button of charging case5S until charging case indicator blink 10 times at same time, it means clear pairing records successfully.

CHARGING



Please use the provided charging cable to recharge the earbuds by the charging case. Charging case LED indicators in white when charging.

After full recharged, LED indicators on charging case turn off.

ACCESSORIES



Wear the right size ear caps for your ears. Adjusting earbuds correctly achieves the best noise reduction performance and sound

NOTES

- 1. Avoid prolonged exposure to excessive volume that may cause noise-induced hearing impairment. Turn the volume down before putting on your earphones, then adjust it to the right
- 2. Don't use earphones while driving or riding your bike
- 3. Stay away from sharp edges, uneven surfaces, metal parts, and anything that could damage
- 4. Do not modify, repair or remove earphones without professional guidance.
- 5. Do not use corrosive or volatile liquid to clean the earphones.
- 6. Do not use earphones in dangerous environments.
- 7. This earphones contains small parts, which may cause choking hazard. Please keep away from children and pets to prevent accidents.

*Improper use of the battery may cause fire or chemical burns. The battery may explode in case of damage.

*The battery can only be charged using an adapter specially provided for this product.

*Please dispose of batteries according to local regulations.Recycle if possible.Do not dispose of batteries as household waste or throw them into a fire, lest they explode.

*Please refer to the user manual for instructions on the charging status indicator.